
40-0033-52

Swing-Out Windshield Weatherstripping

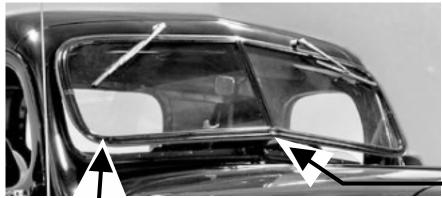

Typical Swing-Out Windshield



*Location For STEP 2


Typical Swing-Out Frame

Swing-Out Frame Channel

Lip Faces Towards Inside Of Vehicle!

Rubber Extrusion Slides into Track

STEP 1

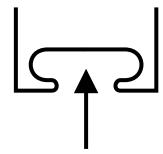

Remove all traces of the old weatherstripping. Clean the swing-out track thouroughly.

STEP 2



You will begin installation of the new extrusion at the **Bottom Center** of the windshield. See pic at the top of this page.

STEP 3

Using a Tuck Tool such as our Part# 94-0110-00, simply work the new extrusion into the track. No Glue necessary! Work extrusion around the frame and trim excess rubber when the 2 ends meet back at **BOTTOM CENTER**.

IMPORTANT: LIP FACES
TOWARDS INSIDE OF VEHICLE!

