



Part# 20-0736-81 Rear Window Weatherstripping


Fits 1961-1963 Ford Pickups

NOTE:


It is necessary to use an auto glass sealer when installing the new rubber window seal to prevent leaking. Steele Rubber Products sells 3M brand Auto Bedding & Glazing Compound. Our part# is 96-8509-96

Installing rear window rubber seal

1. Remove all old weather stripping and weather stripping sealer from the rear window opening flange.
2. Apply a continuous bead of sealer to the rear opening window flange. Apply a continuous bead of sealer into the glass crevice of the rubber seal then install the weather strip onto the glass.
3. Apply a soap/water solution to the flange area of the weather strip, then install a draw cord into the flange crevice of the weather stripping. Allow about 12 inches overlap at the top center.

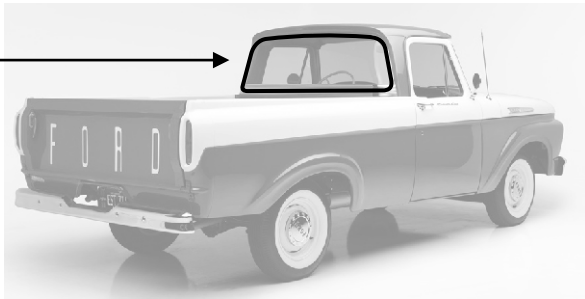

REAR WINDOW GASKET

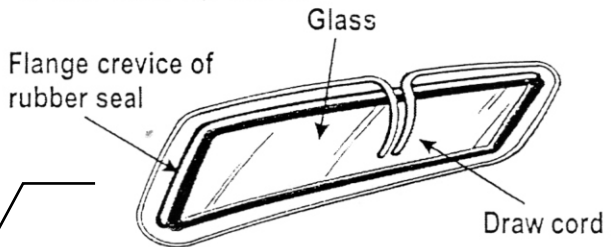

Install draw cord into flange crevice of rubber seal around entire window.

4. Position the glass assembly in the opening from the inside and have a helper apply pressure to the inside of the glass. From the outside, begin pulling the draw cord. This procedure allows the weather stripping to be pulled over the flange area. Alternate from side to side when pulling the cord to keep the installation even.

Use masking tape to temporarily hold the seal onto the glass before installing the window. After the window has been installed the tape can be removed.

