


20-0908-72

1967-1972 Ford Pickup Door Seal

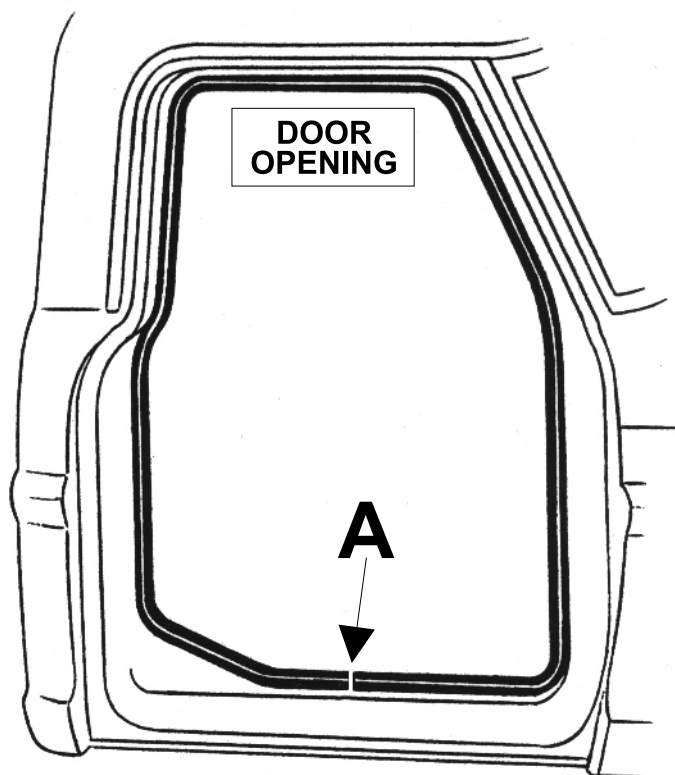

With the door rubber (pressed to the body of the cab - no glue yet) Start inserting at the bottom center (Point A) and go back towards the lock pillar. Continue up the lock pillar to the top, across the top towards the front, down the windshield pillar & hinge pillar finishing at Point A. Trim off extra rubber and begin gluing the rubber seal to the body.