
20-1944-72

1957-1958 Ford Door Seal All 2 Door Sedans - MODEL #64



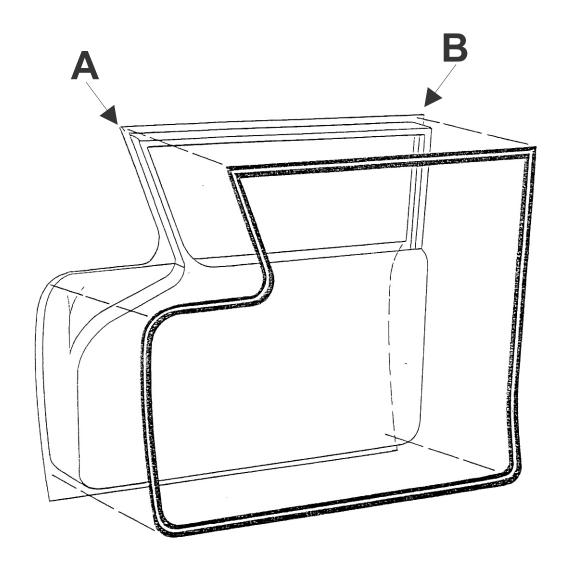

STEP 1: Place the new door seal in position as shown in the above drawing.

STEP 2: Glue the door seal to the door along the top, between "A" and "B", then down the front side, along the botton and back up the the back side to point "B".

STEP 3: As you are glueing the door seal in place be careful not to stretch the rubber as it fits to the shape of the door.

