



## Part# 20-1184-72 Front Door Weatherstripping

Fits 1966-1967 Fairlane & 1966-1970 Falcon 2DR Sedans


**NOTE:** It is necessary to use a weatherstripping adhesive in order to install door seals. Steele Rubber Products recommends and sells 3M brand Weatherstripping Adhesive. Our part # is **96-8008-96**

Place the molded corner of the door seal to the top, rear corner of the door (POINT C). Going down the back edge of the door AND without snapping in the plastic pins, lay the seal against the door to make sure the number of pins in the seal equals the number of holes in the door. Check the back edge, along the bottom and up the front edge of the door.

In some cases there is no hole in the upper front door edge near the upper door hinge (POINT A) for the first pin of the seal to fit into. In this case simply remove the pin from the seal. This segment without the pin will then be attached to the door with adhesive.

Apply the adhesive to the door, not the seal.  
A successful product is 3M Weather Stripping Adhesive.

Apply the adhesive around the door as described in the instructions.

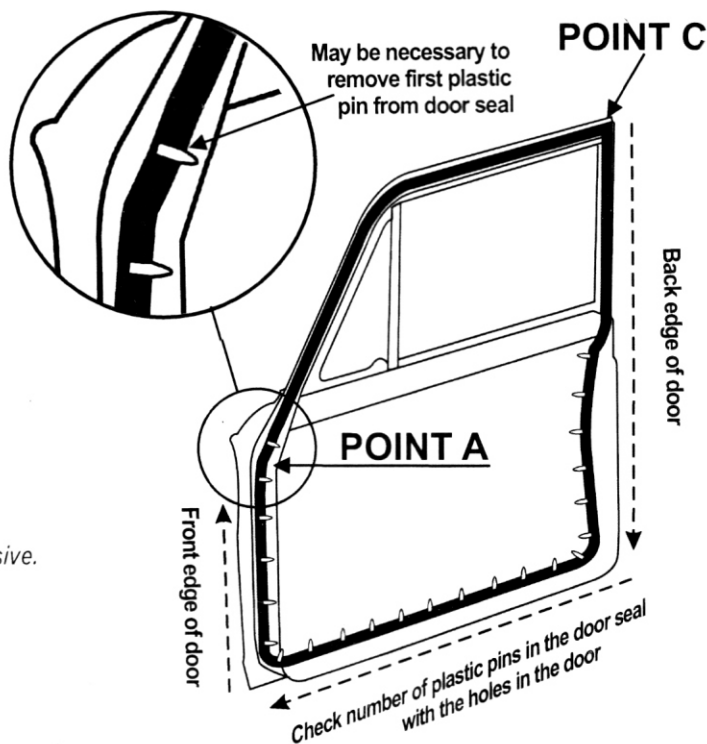

## NOW INSTALL YOUR NEW DOOR SEALS

- 1 Remove the old door seals and glue material from the doors. Clean doors thoroughly where the seals are to be adhered. A degreaser / wax remover product works well.
- 2 Determine the left and right door seals.  
Left = Driver's Door Right = Passenger Door
- 3 Apply adhesive to the front, top and back edge of the door frame.
- 4 The door seal installation will begin at the upper rear corner of the door window frame (POINT C).
- 5 Place the molded corner of the door seal at the top rear corner of the door and begin applying the seal along the top towards the front. Continue application down the front of the door frame to near the upper door hinge. Return to the upper rear corner then continue securing the seal down the back edge of the door until you come to the top hole in the door.
- 6 Insert and secure the first plastic pin of the door seal into the top hole in the back edge of the door. Continue inserting and securing the pins into the holes down the back edge, along the bottom towards the front then up the front edge of the door.
- 7 Additional application of adhesive may be necessary to secure the door seal to the door where the seal transitions from adhesive to pin attachment.

## BEGIN INSTALLATION AT POINT C

